



### YB TRACKER - PICK UP HOURS

Each skipper or assigned representative must pick up and sign for their YB Tracker. **YB Trackers are mandatory on each boat.** Pick up hours at each club are shown below.

\* NOTE – Your assigned tracker will be available at the yacht club indicated in an email sent to each skipper. Please advise us ASAP if you prefer to pick up at the other club.

Email: race@dpyc.org.

### **DANA POINT YACHT CLUB**

WEDNESDAY, 5/21 – 1PM to 6PM THURSDAY, 5/22 – 1PM to 6PM FRIDAY, 5/23 – 1PM to 6PM

24399 DANA DRIVE DANA POINT, CA 92629 949.496.2900

### **CABRILLO BEACH YACHT CLUB**

THURSDAY, 5/22 – 5PM to 7PM FRIDAY, 5/23 – 5PM to 7PM

211 WEST 22ND STREET SAN PEDRO, CA, 90731 310.519.1694

YB Trackers are to be returned to Dana Point Yacht Club either in person after the race, with signed acknowledgment, or by mail with return receipt by 6/2/2025.

Signed Receipt Acknowledgment Required





# YB TRACKER RETURN INFORMATION



YB Trackers are to be returned to Dana Point Yacht Club either in person after the race, with signed acknowledgment, or by mail with return receipt by 6/2/2025.

**Signed Receipt Acknowledgment Required** 

If Mailing to:
Dana Point Yacht Club
24399 Dana Drive, Dana Point, CA 92629
Attention: Race Committee

- 1 Keypad: UP, DOWN, LEFT, RIGHT and OK
- 2 ALERT Key 3 On rear, USB Port

DANA POINT YACHT CLUB 24399 DANA DRIVE, DANA POINT, CA 92629 949.496.2900





### YB TRACKER – EMERGENCY ALERT BUTTON



Keypad: UP, DOWN, LEFT, RIGHT and OK

ALERT Key (3) On rear, USB Port

YB Trackers are equipped with an EMERGENCY ALERT BUTTON referred to as the RED BUTTON. (This is NOT an ON/OFF button)

YB Trackers are in NO WAY meant to replace the use of approved primary safety devices in the event of an emergency.

In the case of an EMERGENCY please follow these instructions to allow help to be notified quickly. It is recommended that these instructions are explained to all crew members as part of your safety briefing prior to leaving port.

### **Sending Emergency Alert:**

- 1. The YB3 Tracker should be turned on and mounted already, take the Tracker out of the pouch.
- 2. Make sure the Tracker is kept upright with a clear view of the sky to ensure the ALERT is sent successfully.
- 3. Lift the clear plastic cover and hold down the RED BUTTON for 5 **SECONDS** the display will show a countdown.
- 4. The ALERT will have been sent when the green light stops flashing and 0 (zero) is displayed in the bottom left hand corner on the display.





# YB TRACKER TURN ON & MOUNT



YB Trackers should be turned on and mounted on your boat with a clear sky view at least 4 hours before the start of the race. The day before is preferable.

The battery charge is sufficient to last thru the duration of the race.

Complete instructions, including turning unit on follow.

- 1) Keypad: UP, DOWN, LEFT, RIGHT and OK
- 2 ALERT Key 3 On rear, USB Port

DANA POINT YACHT CLUB 24399 DANA DRIVE, DANA POINT, CA 92629 949.496.2900

### YB3 Rental Tracker Basic Instruction Guide

Updated 11 June 2016



- 1 Keypad: UP, DOWN, LEFT, RIGHT and OK
- 2 ALERT Key 3 On rear, USB Port

## The YB Rental Tracker is a self-contained battery powered GPS Tracking device.

It uses satellites to get GPS fixes and transmit its positions back to base. Threfore, it needs to have a good view of the sky to operate properly.



### To turn the tracker ON:

To Turn the tracker on, press the LEFT ◀ and RIGHT ▶ keys together on the keypad 1. The screen will light up and you will be prompted to 'press UP to start' ▲.

### Make sure the unit is outside when it is turned on:

The tracker will attempt to transmit as soon as it has been turned on, and will then revert to transmitting at its normal frequency. Whenever the tracker is trying to transmit, a green light will flash on the keypad.

### Sending a 'one-off' position report (manual position report):

To send a one-off position report, press and hold the UP ▲ key for 5 seconds. The screen will wake up and a countdown will be displayed to confirm that the position is being sent.

### To send an alert message:

Lift the flap at the bottom of the tracker, and hold down the red alert button for 5 seconds 2. The screen will say 'Sending Alert...' - ensure that the unit has the best view of the sky possible and leave until the green LED stops flashing. You can repeat this process.

### To charge:

If you need to charge the tracker, simply unscrew the cap covering the USB port on the bottom of the unit 3 and plug into the USB charger. A red LED will turn on when the unit is charging. After charging, check that the USB cap is done back up again very tightly to ensure the unit remains fully waterproof.

### To turn the tracker OFF:

To turn the tracker off, simply press the OK key to enter the main menu, scroll all the way down to 'Deactivation' and press OK, and OK again to confirm.